

Workman® Tripod Assembly and Use Instructions



1. PULL LEGS OUTWARD, THEN LOCK

Tilt tripod into upright, feet-down position. Pull each leg outward and lock into position. Position feet around hatch cover in accordance with work area geometry and surface conditions.



2. ATTACH PULLEYS FOR ACCESSORIES

Lay winch on ground to right side (when facing leg) of any leg and extract about 9 ft (2.7 m) of line. Place cable on split-mount pulley and, using carabiner P/N 10089207, mount pulley onto tripod head to RIGHT of leg to which winch is to be mounted. *Note: Winch snaphook must hang to interior of tripod.*

Lie Lynx Rescuer on ground to right side of leg to which it will attach. Place cable on split-mount pulley and, using carabiner P/N 10089207, mount pulley onto tripod head to RIGHT of leg to be used.



3. RAISE TRIPOD TO DESIRED HEIGHT

Remove ball detent pins from all 3 legs. Raise tripod to desired working height. Maximum tripod height is reached when "MAX" line is visible on lower tripod leg. Insert ball detent pins into each leg once tripod reaches desired height. Ensure that top of tripod head is level.



4. ATTACH RESCUER BRACKET

If using leg-mounted fall arrester, mount it to chosen tripod leg using mounting bracket P/N 506216 or 506232. Insert lower ball lock pin attached to bracket into highest available hole in tripod's lower leg. Insert upper ball lock pin attached to bracket through holes on top of bracket and behind tripod's upper leg.



5. ATTACH RESCUER

Place rescuer nozzle into opening on top of bracket. Slide handle over protrusion at bottom of bracket and insert cotter pin through hole in protrusion to hold rescuer in place.



6. ATTACH WINCH

Partially remove ball detent pin from leg where winch will be installed. Pin should only be removed far enough so that it does not protrude on leg's opposite side. Do not fully remove pin. Mount winch onto tripod leg by placing slot in winch mounting bracket over partially removed ball detent pin on tripod leg. Fully insert tripod leg pin at this time. Insert ball lock pin attached to winch through holes at top of winch mounting bracket and behind tripod leg.



7. FINAL ADJUSTMENTS

Tighten leg base support strap. Check all pins to ensure that they are fully inserted and secure. Check tripod foot traction and overall tripod stability.

CAUTION: Do not open confined space access cover before completing installation of Workman Tripod and all other system components.