

# miniSCAPE Escape Respirator

Single use escape device with 5 minutes service time



1



Break the seal by pulling the tab and open the cover.

2




Take out miniSCAPE.

3



Seal mouthpiece tightly with lips and bite on the biting lugs.

4

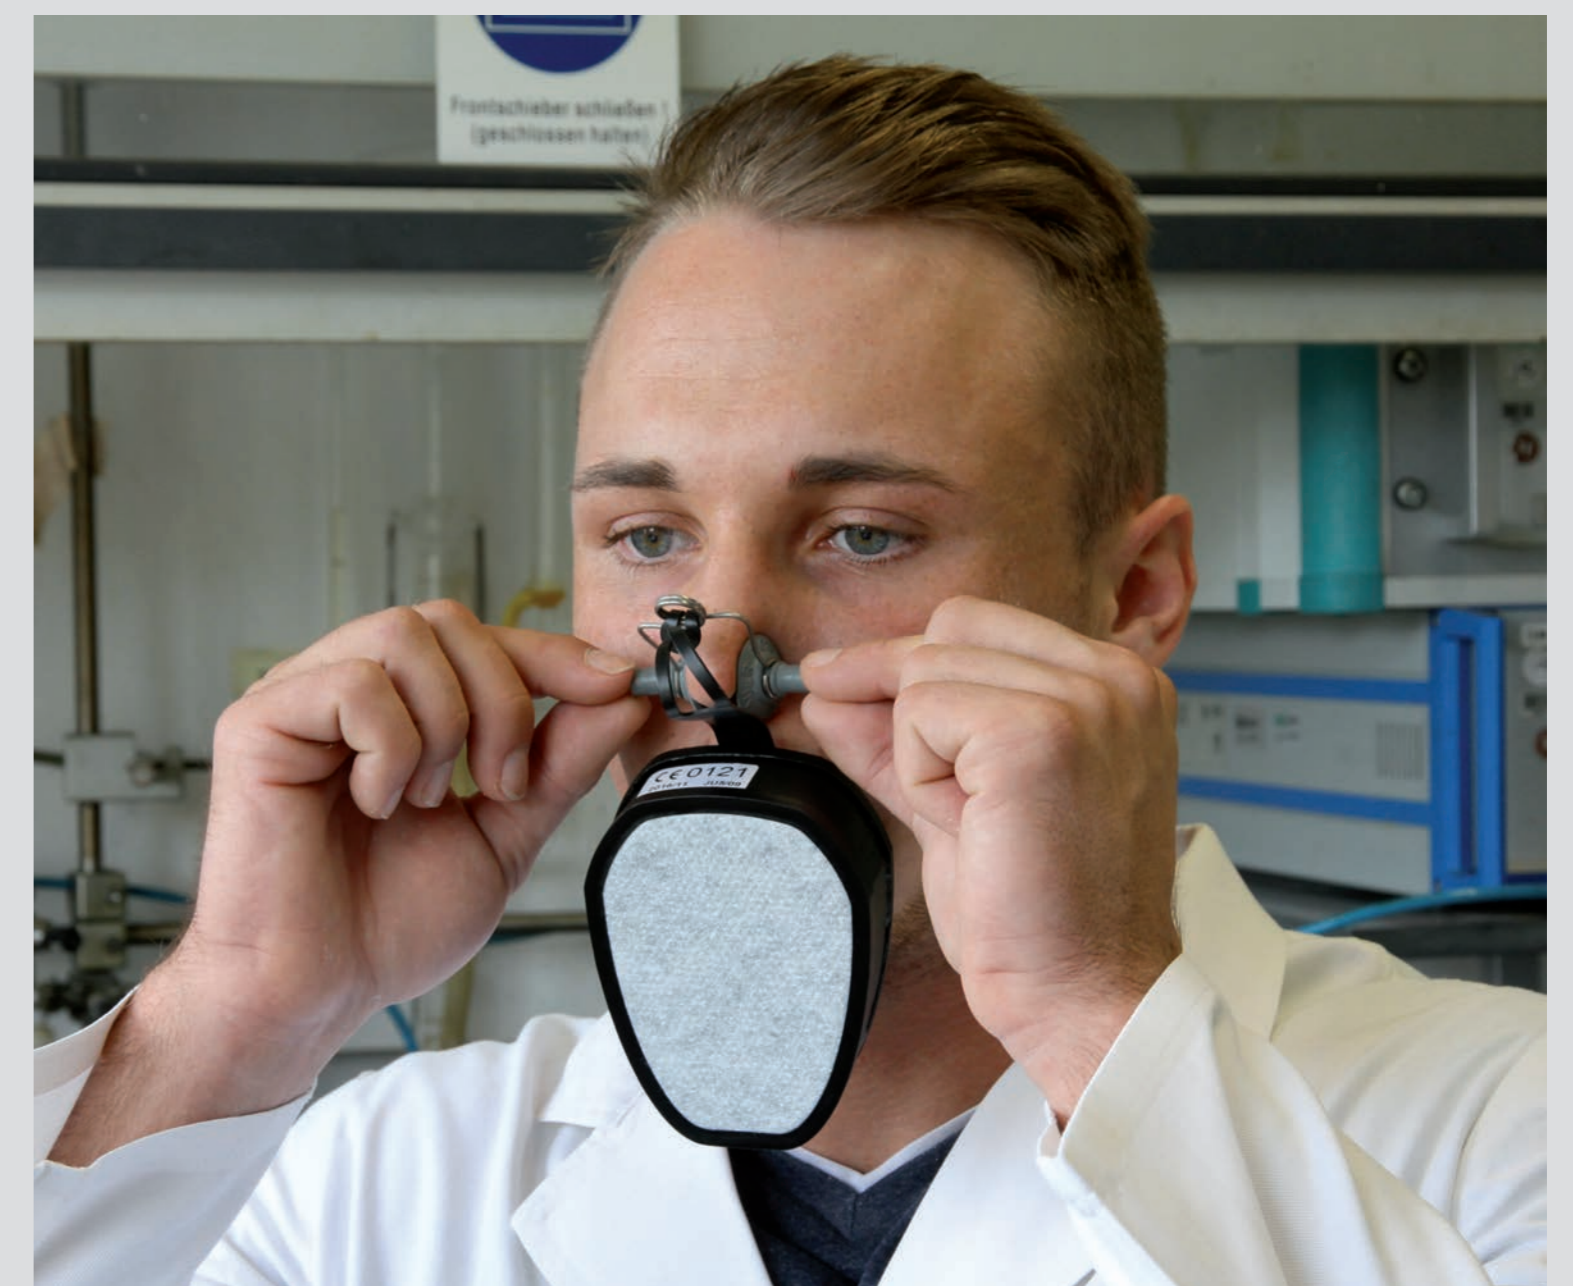

Fit nose clip. Breathe only through mouth.

In case of sudden and unexpected outbreaks of toxic gases or vapours at the workplace, you can quickly and safely leave the danger area using the **miniSCAPE**. It can be donned quickly and is immediately operational.

Small and handy, the miniSCAPE fits into the pocket of any work clothing. It can also be belt carried, with the very practical integrated belt clip.

Approved as ABEK-5, according to DIN 58647-T7.



[facebook.com/MSAsafety](https://facebook.com/MSAsafety)



[youtube.com/MSAsafety](https://youtube.com/MSAsafety)

[MSAsafety.com](https://MSAsafety.com)